

Дистанционно управление

Ръководство на

Собственика

Важна Забележка:

Прочетете внимателно това ръководство преди да инсталирате или използвате новия си климатик. Уверете се, че запазвате това ръководство за бъдещи справки.

Съдържание

Спецификации на дистанционното управление	02
Работа с дистанционното управление	03
Бутони и функции	05
Индикатори на екрана на дистанционното.....	06
Как да използвате основните функции.....	07
Как да използвате разширените функции.....	10

Спецификации на дистанционното управление

Модел	RG10D(D2S)/BGEF, RG10D2(D2S)/BGEF, RG10D3(D2S)/BGEF, RG10D4(D2S)/BGEF
Номинално напрежение	3.0V (Dry batteries R03/LR03×2)
Обхват на сигнала	8m
Температура	-5°C~60°C (23°F~140°F)

Ръководство за бърз старт



Не сте сигурни какво прави функцията?

Обърнете се към разделите „Как да използвате основните функции“ и „Как да използвате разширените функции на това ръководство“ за подробности.

ЗАБЕЛЕЖКА


- Дизайнът на бутоните може да се различава леко от картинката.
- Ако устройството ви няма определена функция, съответният бутон на дистанционното няма да сработва.
- При значителни разлики между „Ръководство за дистанционно управление“ и „Ръководство на потребителя“, относно описанието на функциите, описанието в „Ръководство на потребителя“ има предимство.

Работа с дистанционното управление (ДУ)

Поставяне и смяна на батерии

За дистанционното управление са необходими 2 батерии. Те може да са или да не предоставени с вашия модел. Поставете батериите в дистанционното управление преди употреба.

1. Плъзнете задния капак на дистанционното надолу, за да достъпите мястото за батерии.
2. Поставете батериите, като внимавате да съвпадат (+) и (-) краищата на батериите със символите за правилно поставяне на батериите.
3. Плъзнете капака обратно на мястото му.

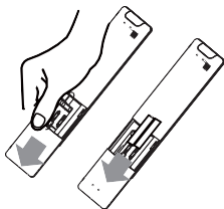

Дистанционно управление

- Пряката слънчева светлина може да пречи на приемника.
- Необходимо е да няма прегради между дистанционното и уреда.
- Ако сигналите от дистанционното случайно контролират друг уред, преместете уреда или се свържете с обслужване на клиенти.

! Изхвърляне на батерии

- Изхвърляйте на обособените места. Обърнете се към местните закони за правилното им изхвърляне
- Батериите може да имат химически символ под иконата за изхвърляне. Този символ означава, че батерията съдържа тежък метал, който надвишава посоченото. Пример: Pb: Олово (>0.004%).
- Уредите и използваните батерии трябва да бъдат третирани в специализирано посоченото за повторна употреба, рециклиране и възстановяване. Така предпазвате околната среда и човешкото здраве.



Ефективност на батериите

За оптимално функциониране:

- Не смесвайте стари и нови батерии и такива от различни марки.
- Не оставайте батериите в дистанционното, ако не го използвате повече от 2 месеца.

Бележки за използване на ДУ


Устройството трябва да отговаря на местните национални разпоредби.

- В Канада трябва да отговоря на CAN ICES-3(B)/NMB-3(B).
- В САЩ отговаря на част 15 от правилата на FCC. Работата е подчинена на следните условия:
 - (1) Устройството не трябва да причинява вредни смущения и
 - (2) Устройството трябва да приема всякакви смущения, включително такива, които могат да причинят нежелана работа.

Това оборудване е тествано и е установено, че отговаря на ограниченията за цифрово устройство от клас B, съгласно част 15 от правилата на FCC. Тези ограничения са предназначени да осигурят защита срещу вредни смущения. Това оборудване генерира, използва и може да излъчва радиочестотна енергия и, ако не е инсталирано и използвано в съответствие с инструкциите, може да причини вредни смущения в радиокомуникациите. Въпреки това няма гаранция, че смущения няма да възникнат в конкретна инсталация. Ако се появят смущения на радио или телевизионно приемане, чрез включване и изключване на оборудването, потребителят се насърчава да се опита да коригира смущенията чрез една или повече от следните мерки:

- Преориентирайте/преместете антената.
- Увеличете разстоянието между оборудването и приемника.
- Свържете оборудването към контакт на различна верига от тази, към която е свързан приемникът.
- Консултирайте се с дилъра или с опитен техник за помощ.
- Неодобрени промени могат да анулират правото на използване на оборудването.

Бутони и функции

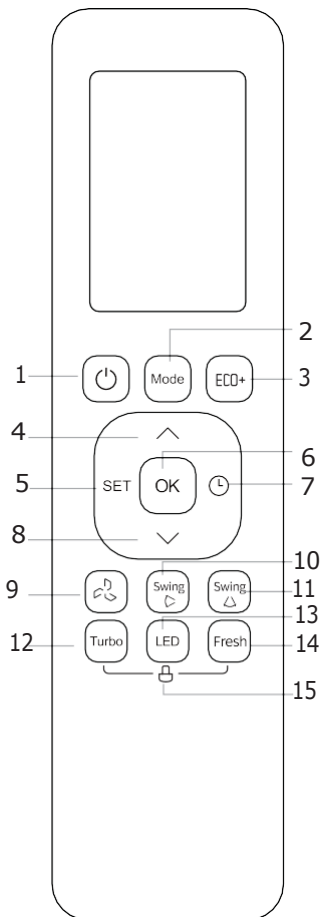


Модел:
RG10D3(D2S)/BGEF

Описание

1	ON/OFF: Включва и изключва устройството.
2	Mode: Авто > Охлаждане > Изсушаване > отопление > Вентилатор
3	ECO+ : Стартира и спира енергоспестяващата функция.
4	Temp Up: Увеличава темп с 1°C (1°F). Макс темп е 30°C (86°F). Заб: Натиснете ▲ & ▼ бутони едновременно за 3 за да превключите дисплея между °C & °F.
5	SET: Следвай ме > Активно почистване > Интелигентен контрол на влажността > AP режим*[*]: В зависимост от модела
6	OK: Потвърждава избраните функции.
7	Timer: Настройте таймера за вкл или изкл на уреда.
8	Temp Down: Намалява температурата на стъпки от 1°C (1°F). Мин температура е 16°C (60°F).
9	Fan Speed: AU > 20% > 40% > 60% > 80% > 100%. Натиснете TEMP ▲ или ▼ бутон за да увеличите/намалите скоростта на вентилатора.
10	Swing (нагоре и надолу): Започва и спира движението на хоризонталната ламела.
11	Swing (ляво и дясно): Започва и спира движението на вертикалната ламела.
12	Turbo: Позволява на уреда да достигне зададената температура за най-кратко време.
13	LED: Включва и изключва LED дисплея и звуковия сигнал на климатика.
14	Fresh: Използва се за стартиране на функцията за Fresh/UV лампа.
15	Lock: Натиснете и задръжте едновременно бутоните Turbo и Sleep за 5 секунди, за да заключите клавиатурата. Натиснете отново тези два бутона заедно за 2 секунди, за да отключите клавиатурата.

Индикатори на екрана на дистанционното

Информацията се показва, когато дистанционното управление се включи.

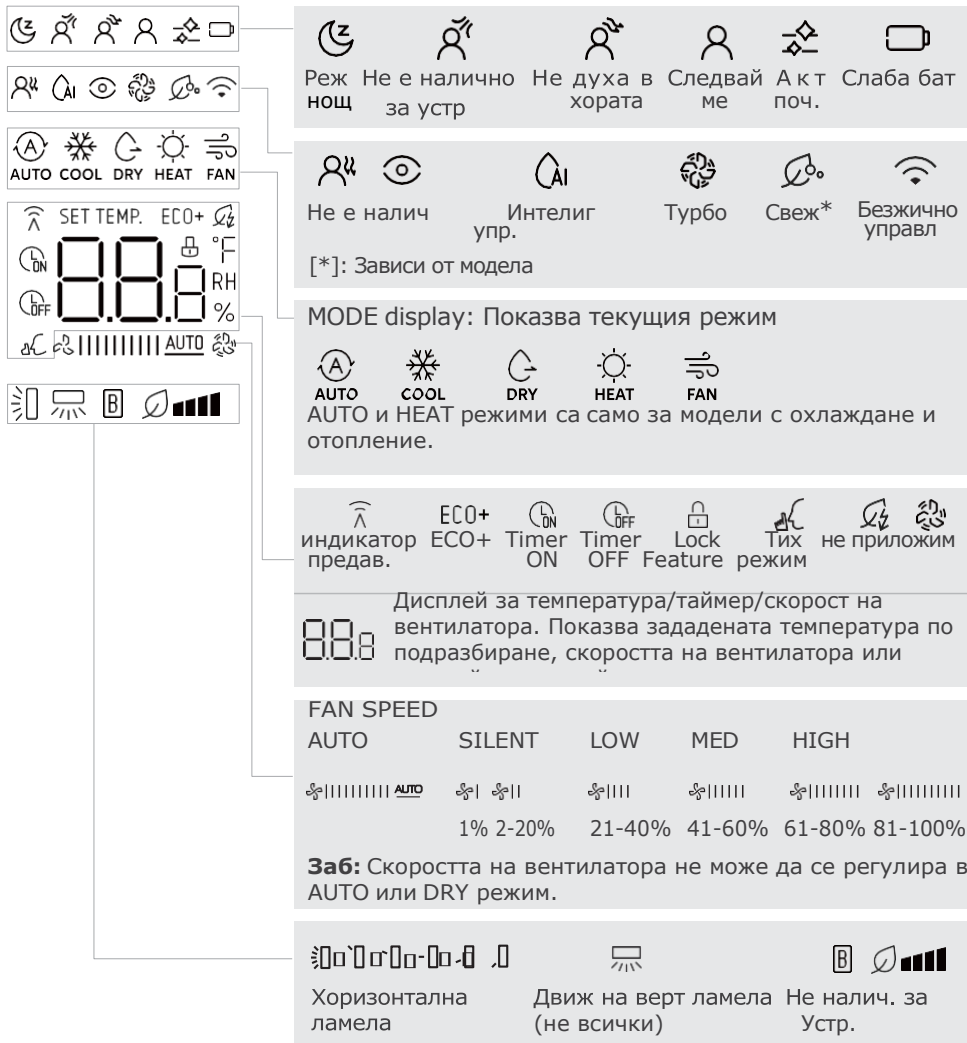

Note: При използване на дистанционното управление, ще се показва само индикаторът за съответната функция. Индикаторите по-горе са само за справка.

Как да използвате основните функции

Заб:

Преди да започнете работа, уверете се, че уредът е включен в контакта и има налично захранване.

AUTO режим

Изберете AUTO режим Желана температура

Включете климатика



Заб:

1. В AUTO режим, уредът автоматично ще избере функциите ОХЛАЖДАНЕ, ВЕНТИЛАТОР или ОТОПЛЕНИЕ в зависимост от зададената температура.
2. В AUTO режим, скоростта на вентилатора не може да бъде настроена.

COOL или HEAT режим

Избор COOL/
HEAT

Желана
темпера
тура

Настр.
FAN
скорост

Включете
климатика




Заб: Режимът ОТОПЛЕНИЕ е приложен само за модели с охлаждане и отопление.

DRY режим

Изберете DRY режим Настр. желаната темп

Включете климатика

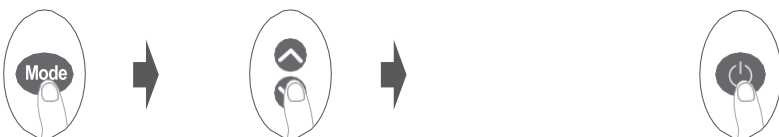

Заб: В режим СУШЕНЕ, скоростта на вентилатора не може да бъде настроена, тъй като тя вече се контролира автоматично.

FAN режим

Изберете FAN
режим

Настройте FAN
(вентилатора)

Включете климатика



Заб: В режим ВЕНТИЛАТОР не можете да настроите температурата. В резултат на това, температурата не се показва на екрана на дистанционното управление.

Настройка Таймер

Таймер ON/OFF - Настройте времето, след което уредът ще се включи/изключи автоматично.

Таймер за включване

Натиснете бутона
TIMER, за да
настроите включване
на климатика.

Натиснете бутоните за увеличаване или
намаляване на температурата, за да зададете
времето, след което искате уредът да се включи.
Издайте 1 секунда, за да активирате времето за
включване на уреда.



Таймер за изключване

Натиснете бутона
TIMER, за да
настроите
изключване на
климатика.

Натиснете бутоните за увеличаване или
намаляване на температурата, за да зададете
времето, след което искате уредът да се изключи.
Издайте 1 секунда, за да активирате времето за
изключване на уреда.




Заб:

1. При настройка на таймера за включване или изключване, времето ще се увеличава с 30 минути с всяко натискане, до 10 часа. След 10 часа и до 24:00, времето ще се увеличава с 1 час. (Например, натиснете 5 пъти, за да получите 2.5 ч и натиснете 10 пъти, за да получите 5 ч). Таймерът ще се върне на 0:00 след 24:00.
2. Отменете която и да е функция, като зададете таймера на 0:00 ч.

Настройка на таймер (пример)

Имайте предвид, че зададените от вас времеви периоди за двете функции се отнасят до часове след текущото време.

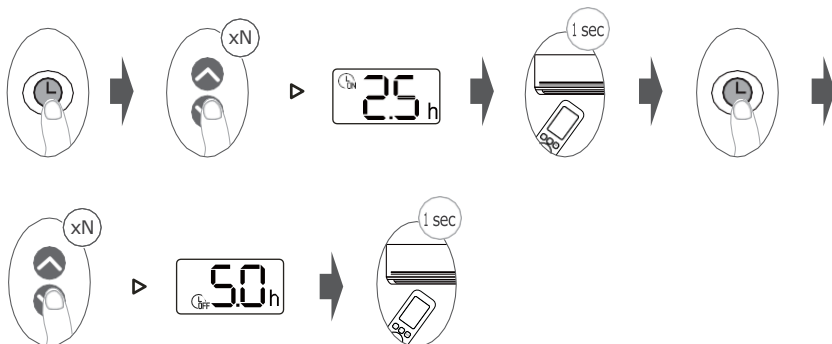

Заб: "x N" означава, че можете да натискате многократно, докато не зададете времето, което ви е нужно.


Пример: Ако текущото време е 13:00, след като зададете таймера по горепосочените стъпки, уредът ще се включи след 2.5 часа (в 15:30) и ще се изключи в 18:00.



Как да използвате разширените функции

Swing (махало) функция


Натиснете Swing бутон

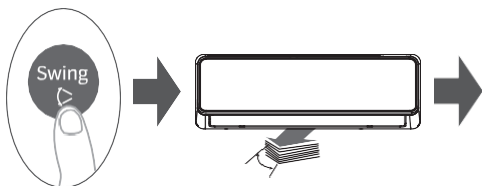

Натиснете неколkokратно, и ако интервалът м/у натисканията е в рамките на 3 секунди, хоризонталната ламела ще работи в следния ред: Спиране на автом люлеене > Стартиране на автом люлеене > Ъгъл на ламелата 1 > Ъгъл на ламелата 2 > Ъгъл на ламелата 3 > Ъгъл на ламелата 4 > Ъгъл на ламелата 5.

Натискайте този бутон многократно, и ако интервалът м/у натисканията е повече от 3 секунди, хоризонталната ламела ще работи в следния ред: Ламела в определен ъгъл > Започва автоматично люлеене > Спира автоматичното люлеене.


За модели RG10D3(D2S)/BGEF,
RG10D4(D2S)/BGEF

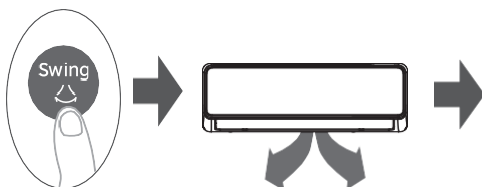

Натиснете този бутон, вертикалната ламела ще люлее автоматично вляво и вдясно.

Функция лек полъх

(За модел RG10D(D2S)/BGEF)

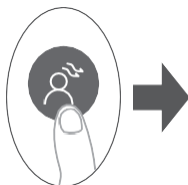


Тази функция избягва директния въздушен поток върху тялото и ви кара да се чувствате потопени в копринена прохлада.

Заб: Функцията е налична само в режимите COOL, DRY or FAN. Функциите Swing и Turbo ще бъдат отменени, когато Breeze бъде активирана.

Натискането на ON/OFF, Mode, Swing, Turbo бутоните или избора на функцията Active clean по време на работа ще отмени функцията Breeze away.


FP функция

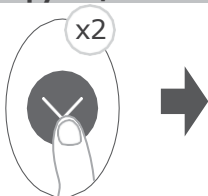

Уредът ще работи с висока скорост на вентилатора (при включен компресор) с автоматично зададена температура от 8°C/46°F. Забележка: Тази функция е само за климатици с термопомпа.


Натиснете този бутон 2 пъти в рамките на една секунда в режим ОТОПЛЕНИЕ с настройка на температурата 16°C/60°F, за да активирате FP функцията. Вътрешният уред ще покаже "FP" в дисплей прозореца. Натискането на бутоните On/Off, Mode, FAN и Temp. по време на работа ще отмени тази функция.

Turbo функция

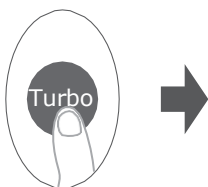

Когато изберете функцията Turbo в режим ОХЛАЖДАНЕ, уредът ще издухва студен въздух с най-силна настройка на вятъра, за да стартира охлаждащия процес. Когато изберете функцията Turbo в режим ОТОПЛЕНИЕ, уредът ще издухва топъл въздух с най-силна настройка на вятъра, за да стартира отоплителния процес (некои уреди). За уреди с електрически отоплителни елементи, електрическият нагревател ще се активира и ще стартира отоплителния процес.

LED екран

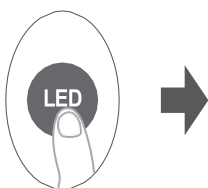


Натиснете този бутон, за да вкл и изкл дисплея на вътр устройство.



Задръжте бутона натиснат за повече от 5 сек (за някои модели)

След като задръжите този бутон за повече от 5 секунди, вътрешното устройство ще покаже текущата температура в стаята. Ако натиснете бутона за повече от 5 секунди отново, дисплеят ще се върне към показване на зададената температура.


ECO+ функция

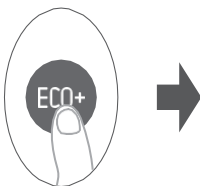

Натиснете този бутон, когато сте в режим ОХЛАЖДАНЕ/ОТОПЛЕНИЕ, вентилаторната скорост ще се променя на Auto, зададената температура ще остане непроменена, което осигурява по-голямо комфортно усещане и спестяване на енергия.


Заб: Тази функция е налична само когато уредът е в режим ОХЛАЖДАНЕ или ОТОПЛЕНИЕ. Функциите Turbo и Silent ще бъдат отменени, когато функцията ECO+ бъде активирана. Иницирирането на функциите Active clean, Turbo, FP, Silent или натискането на бутоните Mode или ON/OFF ще отмени функцията ECO+.

Sleep function

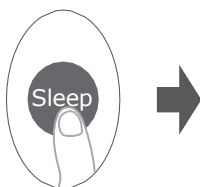

Заб: Функцията Sleep не е налична в режим ВЕНТИЛАТОР и СУШЕНЕ. Функцията се използва за намаляване на енергийното потребление, докато спите. Вентилаторната скорост може да бъде регулирана в режим ОХЛАЖДАНЕ/ОТОПЛЕНИЕ. В режим AUTO вентилаторната скорост е фиксирана. Забележка: След активирането на функцията Sleep, системата ще запамети зададената температура в рамките на 30 минути. Следващия път, когато функцията бъде активирана, тя ще започне да работи на температурата от последната памет. След активирането на функцията Sleep, тя автоматично ще бъде отменена след 9 часа.


Silent function

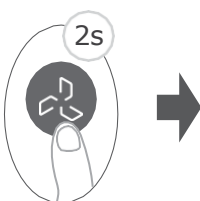

Задръжте бутона за вентилатор за повече от 2 секунди, за да активирате/деактивирате функцията за тиха работа (някои уреди).


Поради ниската честота на работа на компресора, това може да доведе до недостатъчна охлаждаща мощност.

Fresh function

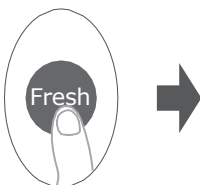


За модели RG10D2(D2S)/BGEF и RG10D3(D2S)/BGEF натиснете Fresh бутона, за да се активират йонизаторът или UV-C лампата. Ако уредът разполага с двете функции, те ще бъдат активирани едновременно. Тази функция ще помогне за пречистване на въздуха в стаята.

Рестартиране на жалюзите

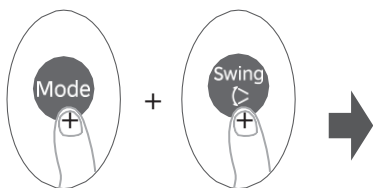

Изключете системата от дистанционното управление и след това натиснете бутоните "Mode" и "Swing" едновременно, докато не чуete звуков сигнал от вътрешното тяло. Вътрешното отяло преминава в режим на нулиране на жалюзите. Не натискайте никакви бутони-процесът ще се завърши автоматично.

SET функция

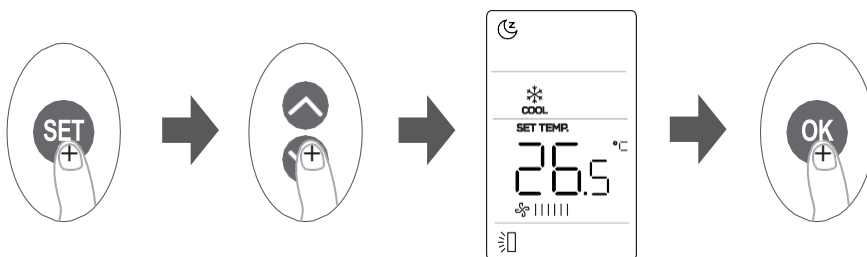

- Натиснете бутона SET, за да влезете в настройките на функцията, след това натиснете бутона SET или бутона TEMP, за да изберете желаната функция. Избраният символ ще мига в зоната на дисплея, натиснете бутона OK, за да потвърдите.

- За да отмените избраната функция, просто изпълнете същите процедури както е описано по-горе
- Натиснете бутона SET, за да превъртите през операционните функции, както следва:

Sleep (☾) > Breeze away (🌀) > Follow Me (👤) > Active clean (✨) > Intelligent humidity control (💧) > AP mode* (🌿)
Функцията е в зависимост от модела.

Заб: Ако вашето дистанционно управление има бутон Breeze away или Sleep, не можете да използвате бутона SET, за да изберете тази функция.

Sleep функция

Използвайте тази функция, за да намалите енергийната консумация, докато спите. Когато функцията Sleep е активирана, климатикът ще регулира интелигентно температурата и скоростта на вентилатора, за да осигури по-комфортна среда за сън. По време на работа в режим Sleep, системата автоматично ще запамети зададената температура в рамките на 30 минути. Следващия път, когато функцията бъде активирана, тя ще започне да работи на температурата от последната памет. След активирането на функцията Sleep, тя автоматично ще бъде отменена след 9 часа.

Breeze away функция

Тази функция предотвратява директния въздушен поток върху тялото и ви кара да се чувствате потопени в копринено охлаждане.

Заб: Тази функция е налична само в режимите ОХЛАЖДАНЕ, ВЕНТИЛАТОР и СУШЕНЕ."

Follow Me функция

Функцията Follow Me позволява на дист. управление да измерва температурата на текущото си местоположение и да изпраща този сигнал към климатика на интервали от 3 мин.

При използване на режимите AUTO, COOL or HEAT, измерването на околната температура от дистанционното управление (вместо от вътрешното тяло) ще позволи на климатика да оптимизира температурата.

Заб: Задръжте бутона Turbo за 7 сек, за да стартирате функцията за запаметяване на функц. Follow Me.

- Ако ф-та за запаметяване е активирана, ще се покаже "On" за 3 сек.
- Ако ф-та за запаметяване е спряна, на екрана ще се покаже "OF" за 3 сек.
- Докато ф-та за запаметяване е активна, натискането на бутона ON/OFF, промяна на режима или прекъсване на захранване няма да отменя ф-та Follow Me.

Active Clean функция

Технологията Active Clean премахва прах и мухъл, които могат да причинят неприятни миризми. Active Clean бързо замразява и размразява топлообменника, за да почисти материала, който е залепнал за него.

Когато тази функция е включена, вътрешното тяло ще покаже „CL“. След 20 до 130 минути уредът ще се изключи автоматично и ще прекрати функцията CLEAN

Intelligent Humidity Control функция

Когато тази функция е активирана, скоростта на вентилатора ще се промени на Auto, зададената температура ще остане непроменена. Системата може да контролира влажността в стаята, за да осигури, че тя не е нито твърде суха, нито твърде влажна, като поддържа комфортна температура

Заб: Тази функция е налична само когато уредът е в режим Cool.

Когато функцията за интелигентен контрол на влажността е активирана, функциите Turbo, Silent, ECO+ или Active Clean ще бъдат автоматично деактивирани, ако са активирани на уреда. Когато изключите уреда или стартирате функциите Active Clean или ECO+, функцията за интелигентен контрол на влажността ще бъде автоматично деактивирана.

AP функция (някои климатици)

Използвайте бутона SET, за да изберете AP (Access Point) режим за активиране на безжичната конфигурация. Ако тази функция не е налична на този уред, възможно е да влезете в AP режим, като натиснете бутона LED 7 пъти в рамките на 10 секунди.

Дизайнът и техническите характеристики могат да бъдат променяни без предварително уведомление с цел подобряване на продукта. За подробности се консултирайте с търговския агент или производителя.

CR355-RG10D(D2S)
16117000A49826
2024.01.06

REMOTE CONTROLLER

OWNER'S MANUAL

IMPORTANT NOTE:

Read this manual carefully before installing or operating your new air conditioning unit. Make sure to save this manual for future reference.

CONTENTS

Remote Controller Specifications 02

Handling the Remote Controller..... 03

Buttons and Functions 04

Remote Screen Indicators 08


How to Use Basic Functions 09

How to Use Advanced Functions 12

Remote Controller Specifications

Model	RG10D(D2S)/BGEF, RG10D2(D2S)/BGEF, RG10D3(D2S)/BGEF, RG10D4(D2S)/BGEF
Rated Voltage	3.0V (Dry batteries R03/LR03×2)
Signal Receiving Range	8m
Environment	-5°C~60°C (23°F~140°F)

Quick Start Guide

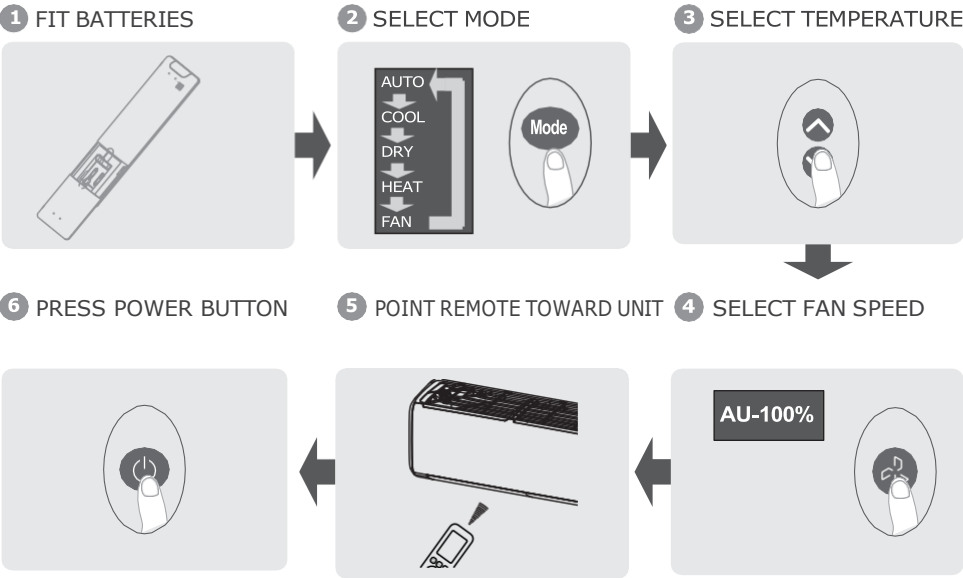

NOT SURE WHAT A FUNCTION DOES?

Refer to the How to Use Basic Functions and How to Use Advanced Functions sections of this manual for a detailed description of how to use your air conditioner.

SPECIAL NOTE


- Button designs on your unit may differ slightly from the example shown.
- If the indoor unit does not have a particular function, pressing the corresponding button on the remote control will have no effect.
- When there are wide differences between “Remote controller Manual” and “USER’S MANUAL” on function description, the description of “USER’S MANUAL” shall prevail.

Handling the Remote Controller

Inserting and Replacing Batteries

The remote control requires 2 batteries. These may or may not be provided with your model. Put the batteries in the remote control before use.

1. Slide the back cover of the remote control downward, exposing the battery compartment.
2. Insert the batteries, paying attention to matching up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Slide the battery cover back into place.

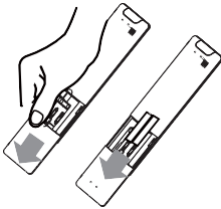

Remote Control

- Direct sunlight can interfere with the infrared signal receiver.
- There must be a clear line of sight between the remote and the appliance.
- If the signals from the remote control happen to control another appliance, move the appliance to another location or contact customer service.

! Battery Disposal

- Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.
- Batteries may have a chemical symbol under the disposal icon. This chemical symbol means that the battery contains a heavy metal that exceeds a certain concentration.
An example is Pb: Lead (>0.004%).
- Appliances and used batteries must be treated in a specialized facility for reuse, recycling and recovery. By ensuring correct disposal, you will help avoid possible negative consequences for the environment and human health.



Battery Performance

For optimal product performance:

- Do not mix old and new batteries, or batteries of different brands.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.

Notes for Using Remote Control

The device could comply with the local national regulations.

- In Canada, it should comply with CAN ICES-3(B)/NMB-3(B).
- In the USA, this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

Buttons and Functions

Before you begin using your new air conditioner, make sure to familiarize yourself with the remote controller. The following content is a brief introduction of the remote controller. For instructions on how to operate your air conditioner, refer to this manual of How to Use Basic Functions section.

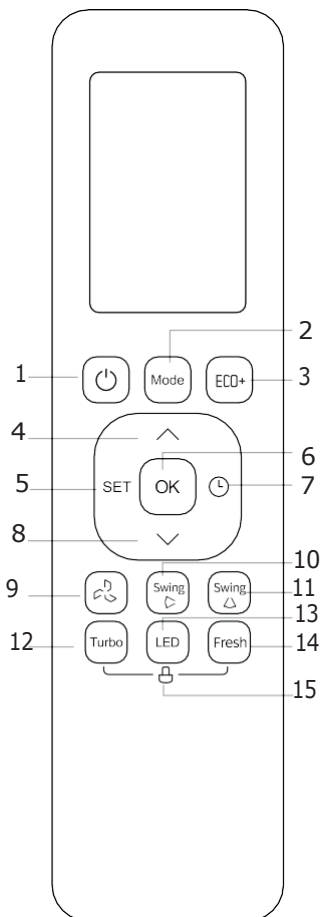



Model:
RG10D3(D2S)/BGEF

Description

1	ON/OFF: Turn the unit on or off.
2	Mode: Auto > Cool > Dry > Heat > Fan Note: Auto and Heat mode are not available for the cooling only appliance.
3	ECO+ : Starts and stops the energy saving operation.
4	Temp Up: Increases temperature in 1°C (1°F) increments. Max. temperature is 30°C (86°F). Note: Press & buttons at the same time for 3 seconds will alternate the temperature display between the °C & °F.
5	SET: Sleep > Breeze away > Follow Me > Active clean > Intelligent humidity control > AP mode * [*]: Model dependent
6	OK: Used to confirm the selected functions.
7	Timer: Set timer to turn unit on or off.
8	Temp Down: Decreases temperature in 1°C (1°F) increments. Min. temperature is 16°C (60°F).
9	Fan Speed: AU > 20% > 40% > 60% > 80% > 100%. Press the TEMP or button to increase/decrease the fan speed in 1% increments.
10	Swing (up and down): Starts and stops the horizontal louver movement.
11	Swing (left and right): Starts and stops the vertical louver movement.
12	Turbo: Enables unit to reach preset temperature in shortest possible time.
13	LED: Turns LED display & air conditioner buzzer on and off.
14	Fresh: Used to initiate the Fresh/UV lamp feature.
15	Lock: Long press both Turbo and Fresh buttons simultaneously for 5 seconds to lock the keyboard. Press together these two buttons again for 2 seconds to unlock the keyboard.

Remote Screen Indicators

Information is displayed when the remote controller is power up.

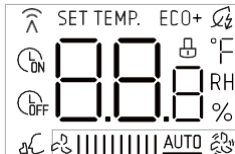

Sleep mode



Not available for this unit.



Breeze away people




Follow me



Active clean



Low battery (If flashes)



Not available for this unit.



Intelligent humidity control



Turbo



Fresh*



Wireless*

[*]: Model dependent

MODE display : Displays the current mode



AUTO



COOL



DRY



HEAT



FAN

AUTO and HEAT mode are for cooling and heating models only.



Transmission Indicator



ECO+ feature



Timer ON



Timer OFF



Timer Lock Feature



Silent Feature



Not available for this unit.



Temperature/Timer/Fan speed display
Displays the set temperature by default, fan speed, or timer setting when using TIMER ON/OFF functions.

FAN SPEED

AUTO



SILENT



1% 2-20%

LOW



21-40%

MED



41-60%

HIGH



61-80%



81-100%

Note: The fan speed can not be adjusted in AUTO or DRY mode.



Horizontal louver swing



Vertical louver swing (some units)



Not available for this unit

Note: While using the remote controller, only relevant function indicator will be shown. The indicators above are for reference only.


How to Use Basic Functions

AUTO mode

Select AUTO mode

Set your desired temperature

Turn on the air conditioner

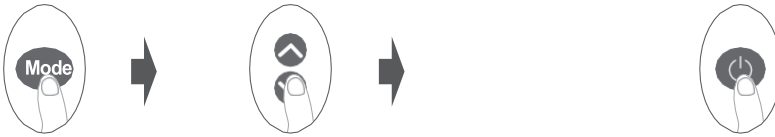

Note:

1. In AUTO mode, the unit will automatically select the COOL, FAN, or HEAT function based on the selected temperature.
2. In AUTO mode, fan speed cannot be set.


COOL or HEAT mode

Select COOL/
HEAT mode

Set the
temperature

Set the
FAN speed

Turn on the air
conditioner

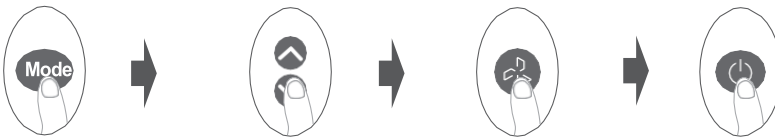


Note: Heat mode is only applicable to the Cooling & Heating models only.

DRY mode

Select DRY mode

Set your desired temperature

Turn on the air conditioner

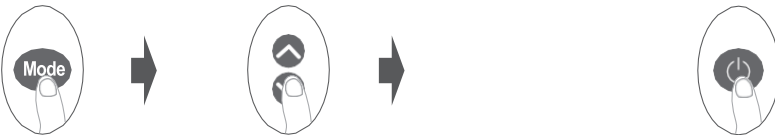

Note: In DRY mode, fan speed cannot be set since it has already been automatically controlled.

FAN mode

Select FAN mode

Set the FAN speed

Turn on the air conditioner



Note: In FAN mode, you can't set the temperature. As a result, no temperature is displayed on the remote's screen.


Setting the TIMER

TIMER ON/OFF - Set the amount of time after which the unit will automatically turn on/off.

TIMER ON setting

Press TIMER button to initiate the time ON sequence.

Press Temp. up or down buttons to set the length of time after which you would like the unit to turn ON. Wait for 1 second to activate time to turn on the unit.

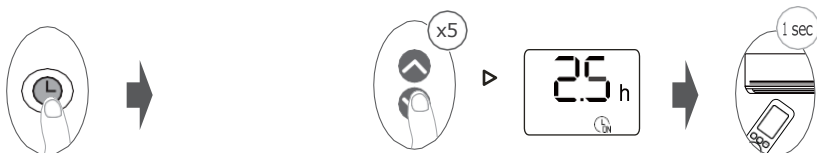

TIMER OFF setting

Press TIMER button to initiate the time OFF sequence.

Press Temp. up or down buttons to set the length of time after which you would like the unit to turn OFF. Wait for 1 second to activate time to turn off the unit.




Note:

1. When setting the TIMER ON or TIMER OFF, the time will increase in 30-minute increments with each press, up to 10 hours. After 10 hours and up to 24:00, it will increase in 1-hour increments (For example, press 5 times to get 2.5h and press 10 times to get 5h). The timer will revert to 0:00 after 24:00.
2. Cancel either function by setting the timer to 0:00h.


TIMER ON & OFF setting (example)

Keep in mind that the time periods you set for both functions refer to hours after the current time.

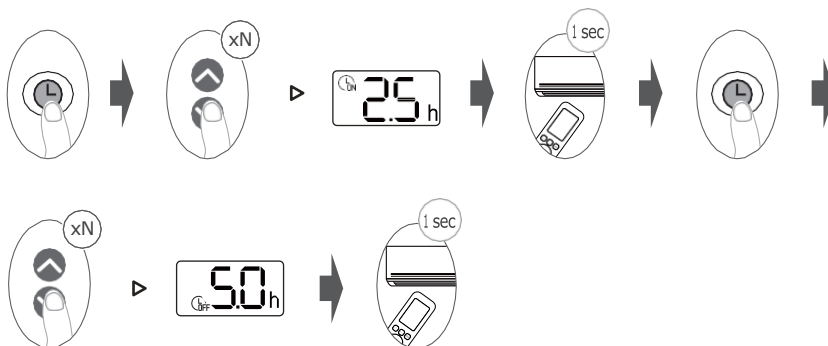

Note: " x N " means you can press multiple times until it is set to the time you need.


Example: If current time is 1:00 PM, after setting the timer as above steps, the unit will turn on 2.5h later (3:30 PM) and turn off at 6:00 PM.

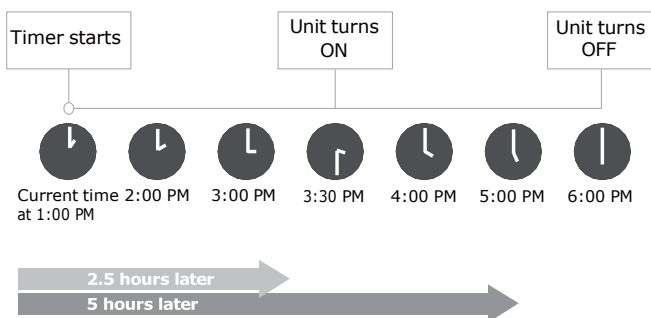

How to Use Advanced Functions

Swing function


Press Swing button

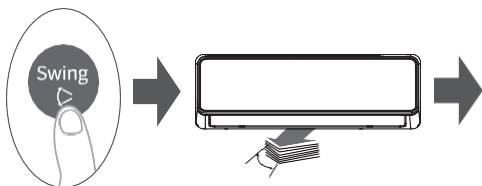

Press this button repeatedly, and if the interval between presses is within 3 seconds, the horizontal louver will operate in the following order:
Louver auto swing stop > Louver angle 1 > Louver angle 2 > Louver angle 3 > Louver angle 4 > Louver angle 5.

Press this button repeatedly, and if the interval between presses is more than 3 seconds, the horizontal louver will operate in the following order:
Louver at a certain angle > Louver auto swing start > Louver auto swing stop.


For models of RG10D3(D2S)/BGEF,
RG10D4(D2S)/BGEF

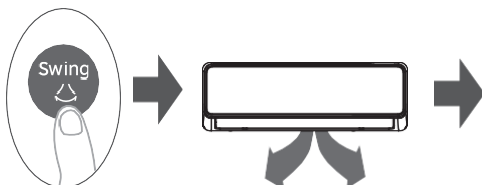

Press this button, the vertical louver will swing left and right automatically.

Breeze away feature

(For model RG10D(D2S)/BGEF)

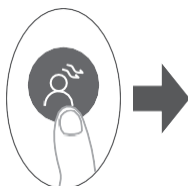


This feature avoids direct air flow blowing on the body and makes you feel indulging in silky coolness.

NOTE: This function is only available under COOL, DRY or FAN mode. The Swing and Turbo functions will be cancel when Breeze away feature is activated.

Press ON/OFF, Mode, Swing, Turbo buttons or select Active clean feature while operating will cancel Breeze away function.

FP function

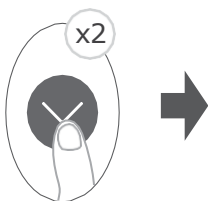


The unit will operate at high fan speed (while compressor on) with temperature automatically set to 8°C/46°F.

Note: This function is for heat pump air conditioner only.

Press this button 2 times during one second under HEAT mode with setting temperature of 16°C/60°F to activate FP function. The indoor unit will display " FP " on the display window. Press On/Off, Mode, FAN and Temp. button while operating will cancel this function.

Turbo function

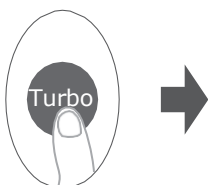


When you select Turbo feature in COOL mode, the unit will blow cool air with strongest wind setting to jump-start the cooling process.

When you select Turbo feature in HEAT mode, the unit will blow heat air with strongest wind setting to jump-start the heating process (some units).

For units with electric heat elements, the electric heater will activate and jump-start the heating process.

LED display

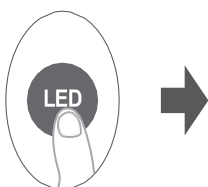


Press this button to turn on and turn off the display on the indoor unit.



Press this button for more than 5 seconds (some units)

After keeping pressing this button for more than 5 seconds, the indoor unit will display the actual room temperature. Pressing the button for more than 5 seconds again will revert back to display the setting temperature.


ECO+ function

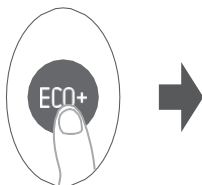

Press this button when in COOL/HEAT mode, the fan speed will change to Auto, the set temperature will remain unchanged which brings more comfortable feelings and power-saving, and reduces temperature fluctuations.

Note: This function is only available when the unit is in COOL or HEAT mode. The Turbo and Silent function will be cancelled when the ECO+ function is activated. Initiating the Active clean, Turbo, FP, Silent function or pressing the Mode or ON/OFF button will cancel the ECO+ function.

Sleep function

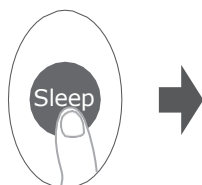


Note: The Sleep function is not available in FAN and DRY mode. The Sleep function is used to decrease energy use while you sleep (and don't need the same temperature settings to stay comfortable).

The fan speed can be adjust in COOL/HEAT mode. In AUTO mode, the fan speed is fixed.

Note: After the sleep function is activated, the system will automatically remember the set temperature within 30 minutes. The next time it is activated, it will start running at the temperature of the last memory. After the sleep function is activated, it will automatically be cancelled after 9 hours.


Silent function

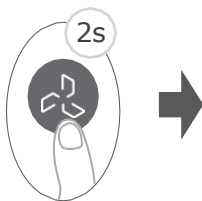

Long press Fan button for more than 2 seconds to activate/disable silent function (some units).


Due to low frequency operation of compressor, it may result in insufficient cooling capacity.

Fresh function

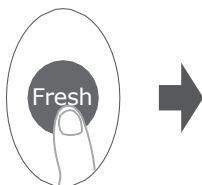


For models of RG10D2(D2S)/BGEF and RG10D3(D2S)/BGEF Press the Fresh button, the Ionizer or UV-C lamp (model dependent) will be activated. If has both features, these two features will be activated at the same time. This function will help to purify the air in the room.

Louver reset function (some units)

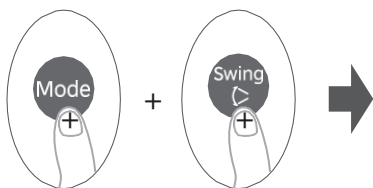

Turn off system from remote control and then press " Mode " and "Swing " button to together until hear beep sound from indoor. The indoor is into louver re-set mode. Do not press any button and it is completing the process automatically.

SET function

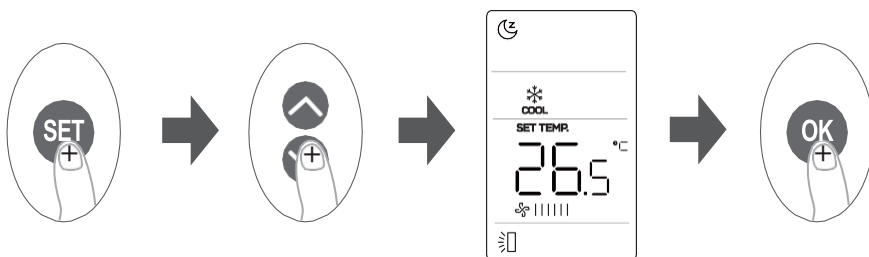

- Press the SET button to enter the function setting, then press SET button or TEMP ▼ or ▲ TEMP button to select the desired function. The selected symbol will flash on the display area, press the OK button to confirm.
- To cancel the selected function, just perform the same procedures as above.
- Press the SET button to scroll through operation functions as follows:

Sleep (☁) > Breeze away (🌀) > Follow Me (👤) > Active clean (🧹) > Intelligent humidity control (💧) > AP mode* (📶)
 [*]: Model dependent.

Note: If your remote controller has Breeze away or Sleep button, you can not use the SET button to select this feature.

Sleep function

Use this feature to decrease energy use while you sleep. When the sleep function is activated, the air conditioner will intelligently adjust temperature, fan speed to provide a more comfortable sleeping environment. Under sleep operation, the system will automatically remember the set temperature within 30 minutes. The next time it is activated, it will start running at the temperature of the last memory. After the sleep function is activated, it will automatically be cancelled after 9 hours.

Breeze away function

This feature avoids direct air flow blowing on the body and makes you feel indulging in silky coolness.
Note: This feature is available under COOL, FAN and DRY mode only.

Follow Me function

The Follow Me function enables the remote control to measure the temperature at its current location and send this signal to the air conditioner in 3-minute intervals. When using AUTO, COOL or HEAT modes, measuring ambient temperature from the remote control (instead of from the indoor unit itself) will enable the air conditioner to optimize the temperature around you and ensure maximum comfort.

NOTE: Press and hold Turbo button for 7 seconds to start/stop the memory feature of the Follow Me function.

- If the memory feature is activated, "On" displays for 3 seconds on the screen.
- If the memory feature is stopped, "OF" displays for 3 seconds on the screen.
- While the memory feature is activated, pressing the ON/OFF button, changing the mode or a power failure will not cancel the Follow Me function.

Active Clean function

The Active Clean technology removes dust and mold that may cause odors. Active Clean rapidly freezes and thaws the heat exchanger, to clean away material that has adhered to it. When this function is turned on, the indoor unit displays "CL". After 20 to 130 minutes, the unit will turn off automatically and terminate CLEAN function.

Intelligent Humidity Control function

When this function is activated, the fan speed will change to Auto, the set temperature will remain unchanged. The system can control the room humidity to ensure that it is not too dry or too damp while maintaining a comfortable temperature.

Note: This function is only available when the unit is in Cool mode.

When the Intelligent Humidity Control function is activated, the Turbo, Silent, ECO+ or Active clean function will automatically exit if it is enabled on the machine.

When turning the unit off or initiating the Active Clean or ECO+ function, the Intelligent Humidity Control function will automatically exit.

AP function (some units)

Use the SET button to choose AP (Access Point) mode to enable wireless configuration. If this function is not available on this unit, it might be possible to enter AP mode by pressing the LED button 7 times in 10 seconds.

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

CR355-RG10D(D2S)
16117000A49826
2024.01.06